

Movastop Operation and Maintenance Guide



Operating Instructions

To Release:

- 1) Ensure that the door is in the locked position.
- 2) Using a Life-Line key (PR-7320-LLBK) release the lever handle mechanism on the Movastop as shown at Fig 1.
- 3) Pull the lever downwards to release the Movastop from the frame. **Note:** It is recommended that there is a procedure for stowing away the Movastop safely before unlocking the door to deal with the barricade situation (suggest riser cupboard or ward office)
- 4) If the installation is equipped with the parking function; offer the bottom of the Movastop into the lower parking shoe and push the profile towards the wall plate. Then push the Movastop lever upwards to lock the Movastop in place.

To Re-lock:

- 5) Present the Movastop towards the frame plate. Lift the lever slightly and engage the lugs on the back of the product into their corresponding recesses. Push the lever upwards to snap lock the Movastop back on the frame.

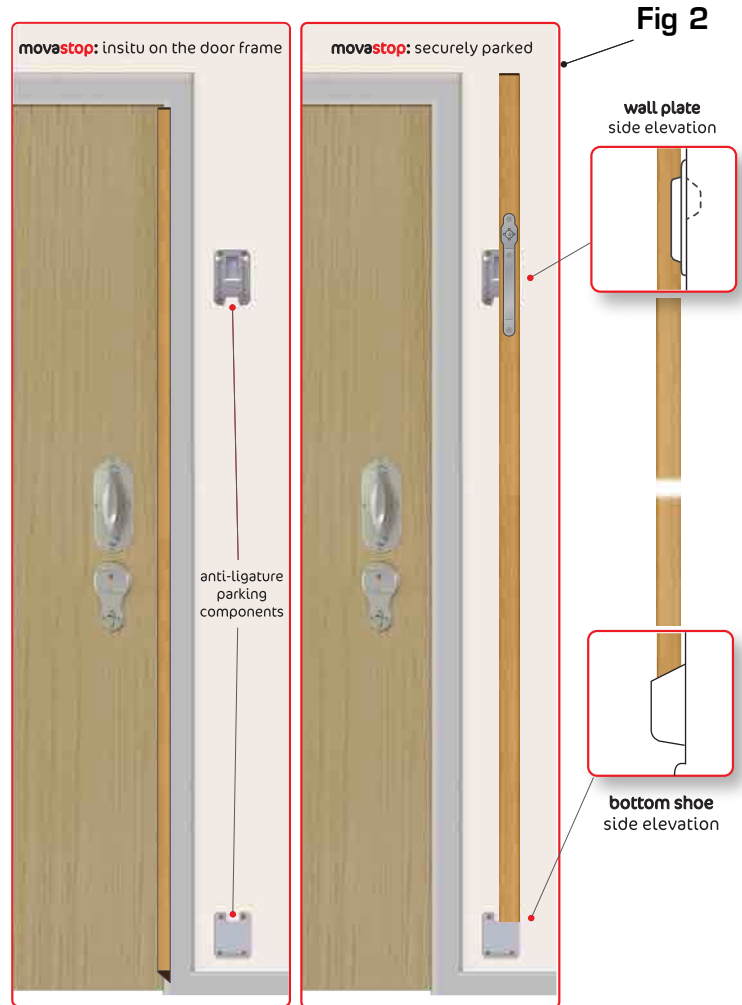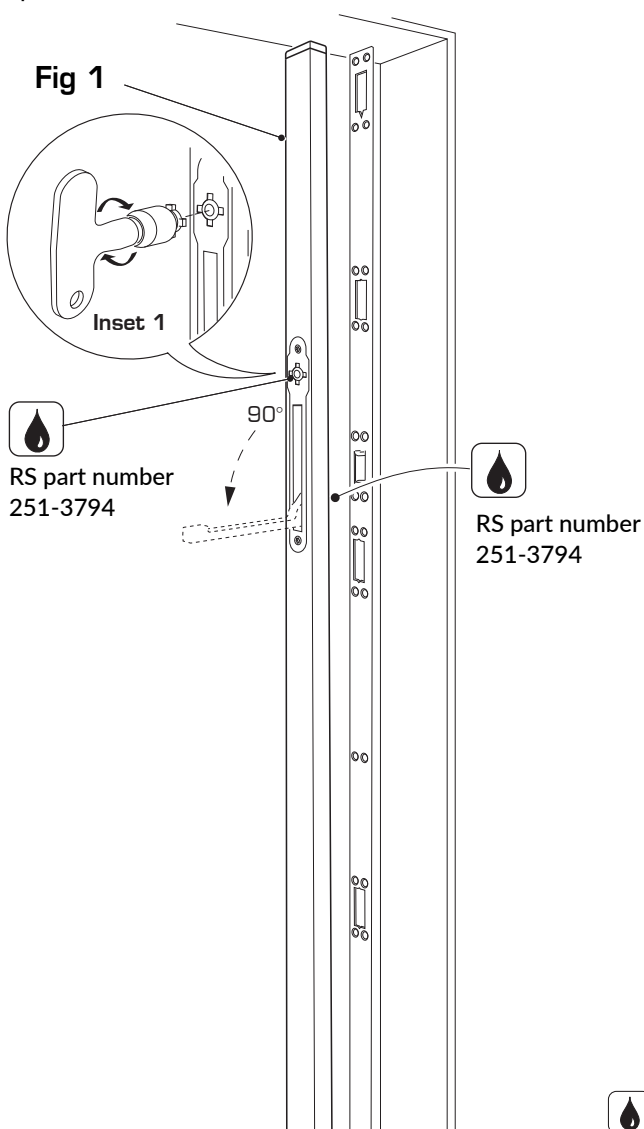

Maintenance Procedure

- 1) Periodically inspect the Movastop product to ensure it is firmly held in position and does not pose any ligature risk under normal use.
- 2) Remove and inspect the product at regular intervals to make sure that the fixing lugs are secure and any assembly screws are adequately tight.
- 3) Lubricate the key-way and lock mechanism under a regular maintenance program using RS High Specification Dry Lubricant only (RS part number 251-3794) as indicated at Fig. 1.
- 4) To clean the product gently wipe with a cloth dampened in warm soapy water.
- 5) Inspect parking components regularly to ensure no foreign objects have been placed in the shoe which could prevent the parking function in a barricade scenario.

 = Lubricate at point shown.