SAFEHINGE PRIMERA

SOP008 Revision 3

General Maintenance Instructions for Locksets

Product components manufactured from:-

a. Brass (electro-plated & lacquered)
   or
b. Mild Steel (electro-plated & lacquered)
   or
c. Aluminium (electro-plated & anodised)
   or
d. Cast Alloy (electro-plated & lacquered)

General Cleaning

A summary of cleaning methods for SHP locksets can be found on SOP257.

Specific Maintenance

Moving parts (Turn/Pull / Lockcase) should be regularly lubricated with RS High Specification Dry Lubricant only (RS part number 251-3794) B700241.
Note: We cannot endorse the use of any other lubricants.

To lubricate Primera locks supplied before Summer 2014 point the aerosol straw inside the port which accommodates the roller catch (leave the face-plate in situ) Fig 1.

For locks supplied Post Summer 2014 remove the face-plate to reveal small holes in bottom forend designed for lubrication purposes Fig 2.

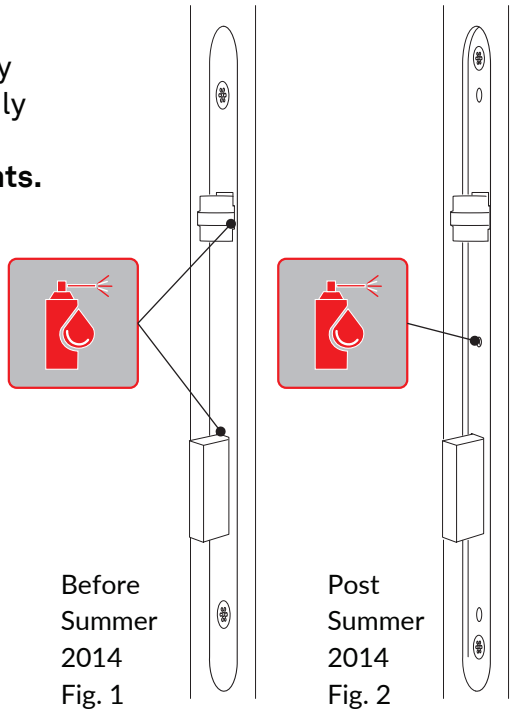

Before Summer 2014 Fig. 1

Post Summer 2014 Fig. 2

Important Notes

1. Primera products are supplied with anti-tamper security screws. These must not be substituted with any other fixings.
2. The installer should ensure that security screw fixing bits are passed to the end user at hand over.
3. Periodic checks of screw fixings should be carried out and loose fixings tightened when necessary. This is essential to ensure the anti-ligature integrity of the product.
4. Any missing screws should be replaced with identical anti-tamper fixings. Replacement screws can be obtained from Safehinge Primera.