


# SWIFTfit + SWIFTstop Doorset Dimensions

The guide below will help you work out the overall doorset dimensions using the architrave boundary, structural opening, clear opening width or preferred door leaf dimension as the starting point.

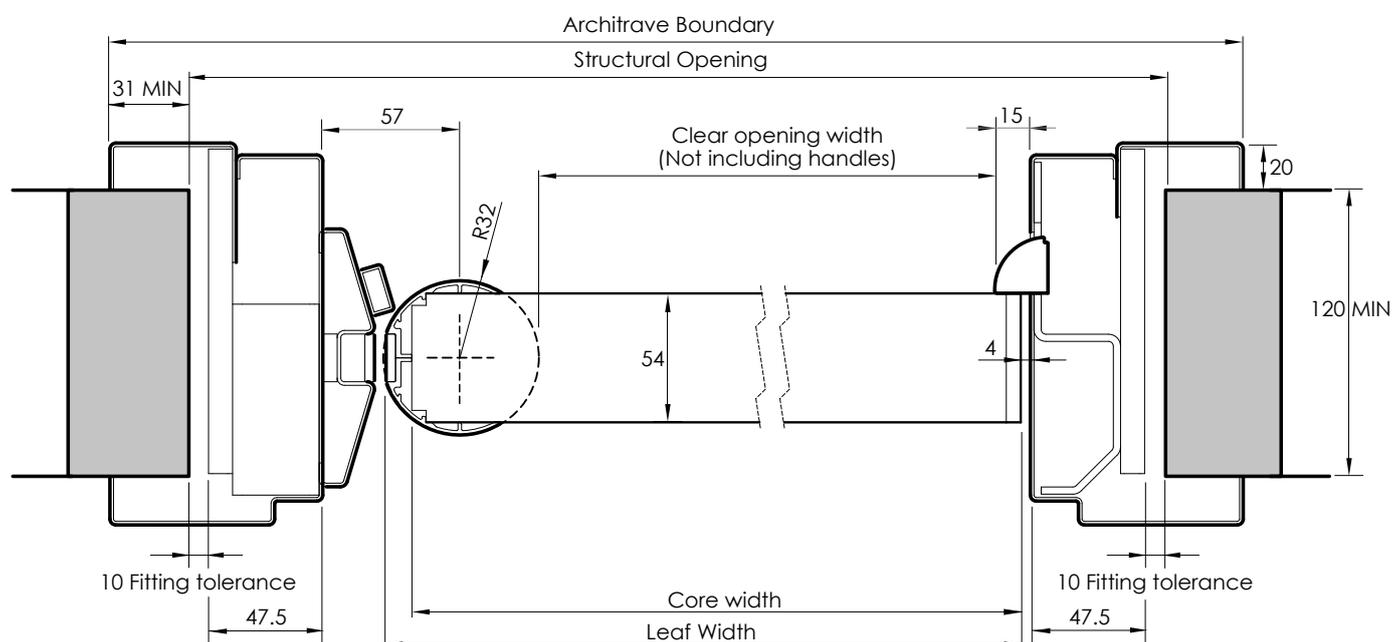

## **Structural opening ↔ Clear opening width:**

Clear opening width = Structural Opening – 219

Structural Opening = Clear opening width + 219

## **Clear opening width ↔ Leaf width:**

Leaf width = Clear opening width + 75

Clear opening width = Leaf width – 75

## **Structural opening ↔ Leaf width:**

Leaf width = Structural Opening – 144

Structural Opening = Leaf width + 144

## **Leaf width ↔ Lipped core width:**

Lipped core width = Leaf width – 12 mm

Leaf width = Lipped core width + 12 mm

## **\*MIN\* Architrave Boundary ↔ Clear opening Width:**

Clear opening width = \*MIN\* Architrave Boundary – 281

\*MIN\* Architrave Boundary = Clear opening width + 281

(NOTE: Architrave width can be increased)